


NEWALL

PART # CONFIGURATION FOR

MHG-TT

SERIES INCREMENTAL LINEAR ENCODERS

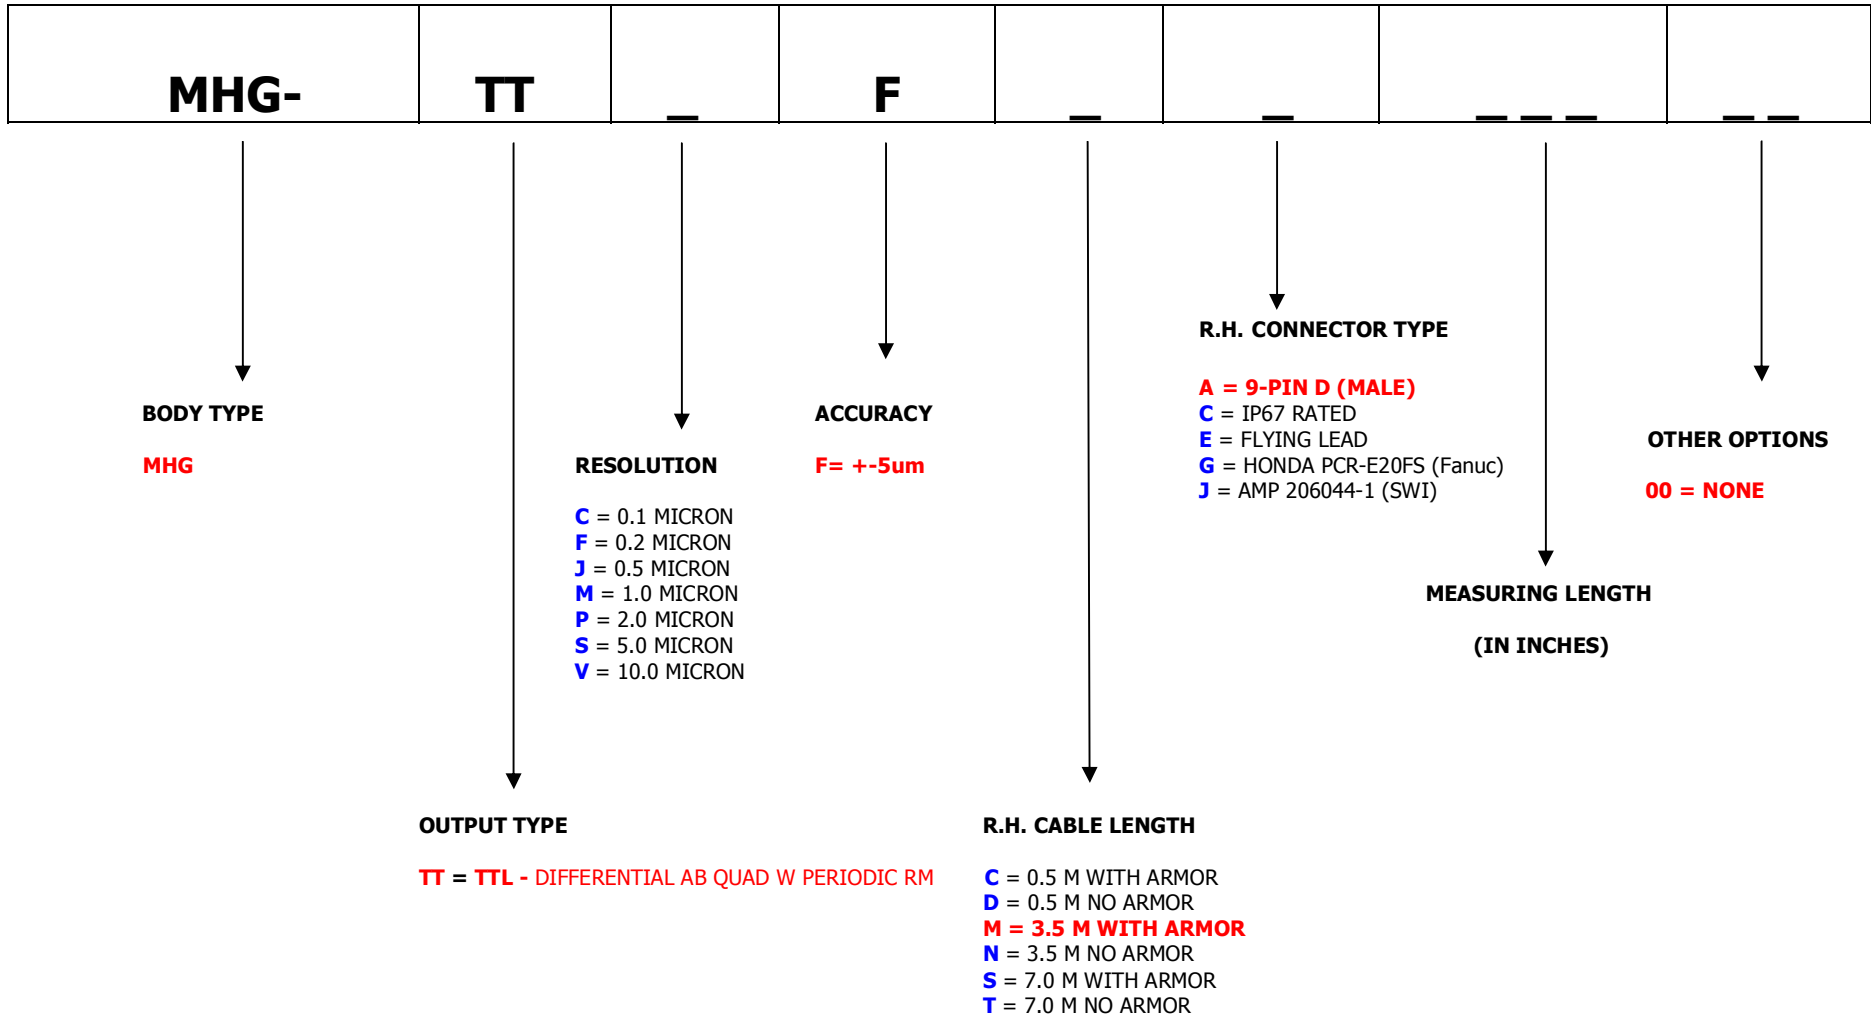

Standard specifications shown in red

Measuring Lengths

2"
4"
6"
8"
10"
12"
14"
16"
18"
20"
22"
24"
26"
28"
30"
32"
34"
36"
38"
40"

- Always order by measuring length (MHG overall length = measuring length + 7.4")
- Prefix the measuring length with 0's as necessary to get to 3 digit order code. Example: 2" is 002
- Linear Encoders include reader head with cable, scale (tube), and brackets to mount the scale (tube)
- Scale (tube) mounting kit # FX00MDBR is provided
- Extension cables are sold separately
- Bracket kits to mount the reader head are sold separately

Reader Head Bracket Kits

<i>Part #</i>	<i>Description</i>
UBK02	Universal Bracket Kit (Mounts one MHG and one SHG reader head)
UBK03	Universal Bracket Kit (Mounts two MHG reader heads)
LBK02	Lathe Bracket Kit (Mounts one MHG and one SHG reader head)
LBK03	Lathe Bracket Kit (Mounts two MHG reader heads)
QBK01	Quill Bracket Kit (Mounts one MHG reader heads)

Optional Scale (Tube) Mounting Hardware

<i>Part #</i>	<i>Description</i>
600-65340	Single End Mount for MHG scale (tube)

Setup Tube

<i>Part #</i>	<i>Description</i>
6666666	Alignment Tool for Use During Installation (Free)


NEWALL

PART # CONFIGURATION FOR

EXTENSION CABLES

for use with

SHG-TT, SHG-VV, SHG-VM, SHG-TS, MHG-TT, MHG-VV, MHG-VM, & MAG-TT
SERIES LINEAR ENCODERS

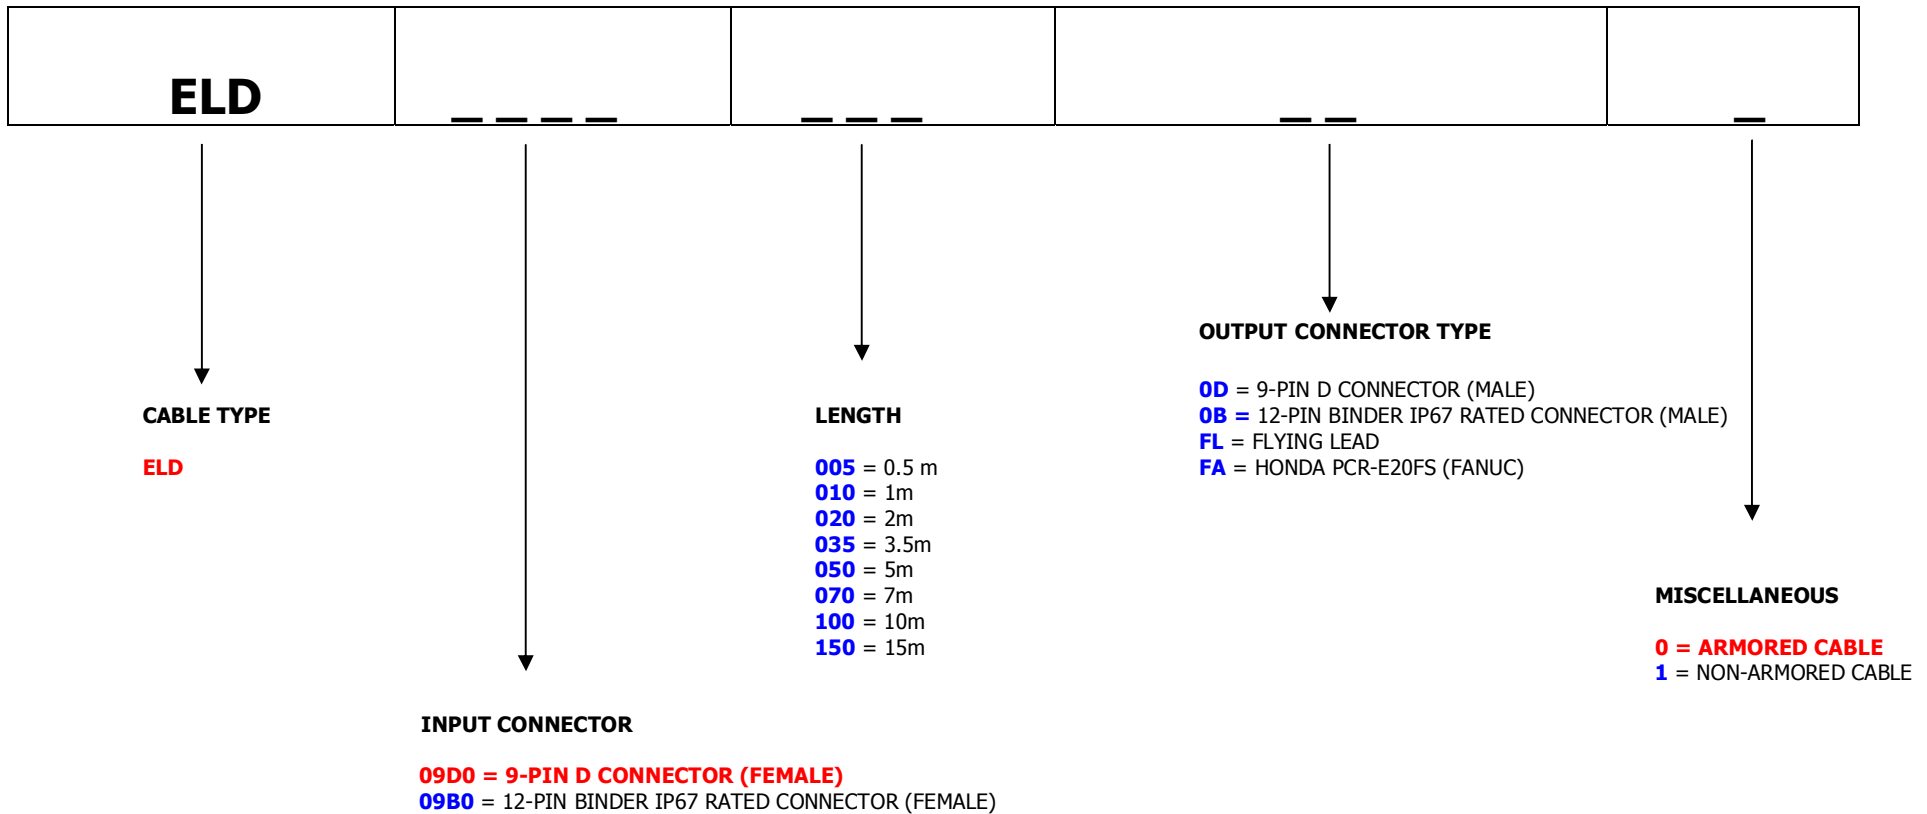

Standard specifications shown in red

V 01.20.05