


## SERIES INCREMENTAL LINEAR ENCODERS

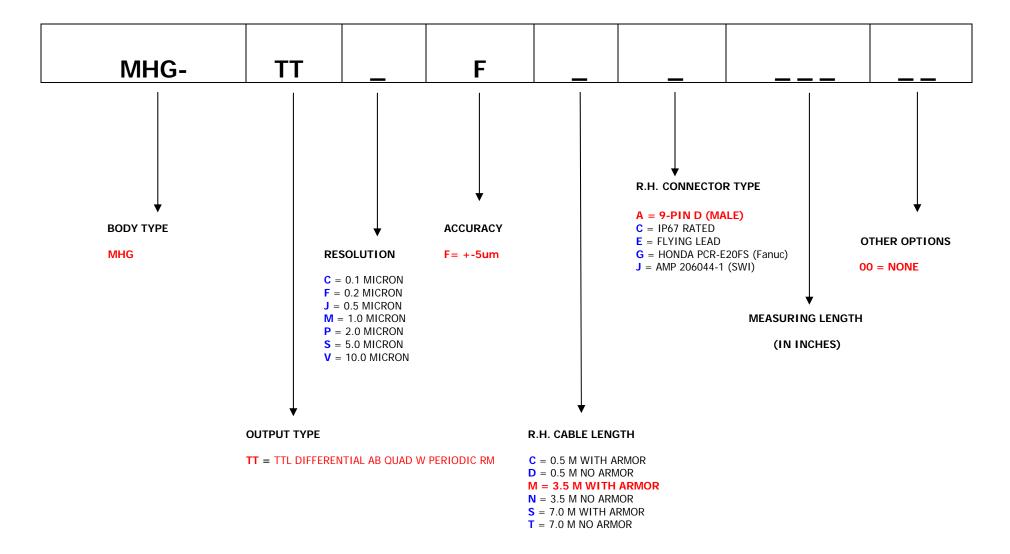

Measuring		
Lengths 2"	- Always order by measuring length (MHG overall length = measuring length + 7.4")	
2 4"	- Prefix the measuring length with 0's as necessary to get to 3 digit order code. Example: 2" is 002	
6"		
8"	- Linear Encoders include reader head with cable, scale (tube), and brackets to mount the scale (tube)	
10"		
12"	<ul> <li>Scale (tube) mounting kit # MHBKITSTD is provided</li> </ul>	
14"		
16"	- Extension cables are sold separately	
18"	Dunnlant leite	to many the mandan band are cald as weath
20″ 22″	- Bracket kits to mount the reader head are sold separately	
24"	Reader Head Bracket Kits	
26"	Part #	Description Description
28"	UBK02	Universal Bracket Kit (Mounts one MHG and one SHG reader head)
30"	UBK03	Universal Bracket Kit (Mounts two MHG reader heads)
32"	LBK02	Lathe Bracket Kit (Mounts one MHG and one SHG reader head)
34"	LBK03	Lathe Bracket Kit (Mounts two MHG reader heads)
36"	600-65480	Quill Bracket Kit (Mounts one MHG reader head)
38"		
40"	Optional Scale (Tube) Mounting Hardware	
	<i>Part #</i> 600-65340	Description Single End Mount for MHG scale (tube)
	000-05540	Single the would for wind scale (tube)
	Setup Tube	
	Part #	Description
	6666666	Alignment Tool for Use During Installation (Free)
		5 ·




PART # CONFIGURATION FOR

## **EXTENSION CABLES**

for use with

SHG-TT, SHG-TS, SPB-TT, SPB-TS, MHG-TT, MAG-TS

**SERIES LINEAR ENCODERS** 

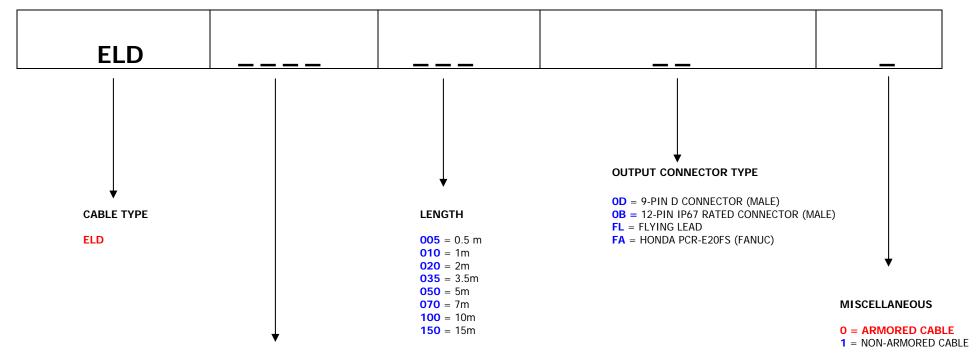

**INPUT CONNECTOR** 

09D0 = 9-PIN D CONNECTOR (FEMALE) 09B0 = 12-PIN IP67 RATED CONNECTOR (FEMALE)